





DATA SHEET

# TH 210-R

## **Humidity and temperature transmitter**







Sondes en inox ou en polycarbonate



2 relay outputs



Two 4-wire analogue output 0-5/10 V or 0/4-20 mA




ABS V0 IP65 housing, with or without display

#### **Features**

- Power supply 24 Vdc/Vac or 100-240 Vac with galavnic insulation
- "¼ turn" system mounting with wall-mount plate
- Calculated parameters absolute humidity, dew point, combination ratio, wet temperature and enthalpy
- Trend indicator

#### Part number

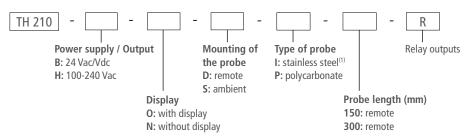

**Example:** TH210 – BNDP150 – R: Temperature and humidity transmitter, 24 Vac/Vdc power supply, without display, with remote probe in polycarbonate of 150 mm length and relay outputs.

**Important note**: the TH210 – H model (100-240 Vac) is available only with display.

#### **Technical specifications**

Parameter	Accuracy <sup>(3)</sup>	Measuring range	Resolution
Relative humidity (% RH)	Accuracy (Repeatability, linearity, hysteresis): ±1.5% RH (from 5 to 95% RH and from 15°C to 25°C) Factory calibration uncertainty: ±0.88% RH Temperature dependence: ±0.04 x (T-20)% RH (if T<15°C or T>25°C)	From 0 to 100 %RH	0.1%RH
Wet temperature $^{(2)}$ ( $^{\circ}C_{tw'}$ $^{\circ}F_{tw}$ )	Response time: $<$ 10 seconds (from 10 to 80% RH, $V_{\rm air} = 2$ m/s)	From -50 to +100°C <sub>tw</sub>	0.1°C <sub>tw</sub> ; 0.1°F <sub>tw</sub>
Dew-point <sup>(2)</sup> (°C <sub>td</sub> , °F <sub>td</sub> )	Response time: $<$ 10 seconds (from 10 to 80% RH, $V_{\rm air} = 2$ m/s)	From -50 to +100°C <sub>td</sub>	0.1°C <sub>td</sub> , 0.1°F <sub>td</sub>
Absolute humidity <sup>(2)</sup> (g/m³)	Response time: $<$ 10 seconds (from 10 to 80% RH, $V_{\rm air} = 2$ m/s)	From 0 to 600 g/m <sup>3</sup>	0.1 g/m³
Enthalpy <sup>(2)</sup> (kJ/kg)	Response time: < 10 seconds (from 10 to 80% RH, $V_{air} = 2 \text{ m/s}$ )	From 0 to 15 000 kJ/kg	From 0 to 10 000: 0.1 kJ/kg From 10,000 to 15,000: 1 kJ/kg
Combination ratio <sup>(2)</sup> (g/kg)	Response time: < 10 seconds (from 10 to 80% RH, $V_{\rm air} = 2$ m/s)	From 0 to 9999.9 g/kg	0.1 g/kg
Pt100 temperature	$\pm 0.3\%$ of reading $\pm 0.25^{\circ}C$ Response time: $T_{90}=0.9$ second for $V_{air}=1$ m/s	Ambient model: from -20 to +80°C Remote model with polycarbonate probe: from -20 to +80°C Remote model with stainless steel probe: from -40 to +180°C	0.1 °C ; 0.1 °F

Class 210 transmitters have two analogue outputs which correspond to both displayed parameters. It is possible to activate one or two outputs and to select for each between humidity, temperature and the calculated parameters (The default configuration for the output 1 is 0-100% RH in hygrometry and 0-50°C in temperature for the output 2).

<sup>(1)</sup>Available only with the remote probe / <sup>(2)</sup>Calculated value / <sup>(3)</sup>All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation.



#### **General features**

Power supply

24 Vac / Vdc ±10% 100-240 Vac. 50-60 Hz

Warning: risk of electric shock



Output	2 x 4-20 mA or 2 x 0-20 mA or 2 x 0-5 V or 2 x 0-10 V (4 wires) Common mode voltage <30 VAC
	Maximum load: 500 Ohms (0/4-20 mA) Minimum load: 1 K Ohms (0-5/10 V)

2 changeover relays. Relay outputs NO: 5A / NC: 3A / 240 Vac

Inputs and outputs (models 100-240 Vac) Device fully protected by **Galvanic** isolation

DOUBLE ISOLATION or REINFORCED ISOLATION Outputs (models 24 Vac/Vdc)

TH210-B: 6 VA / TH210-H: 8 VA Consumption

Electrical Screw terminal block for cable 2.5 mm<sup>2</sup> Carried out according to the code of good practice connection

Hygrometry: capacitive Type of sensor Temperature: Pt100 1/3 as per DIN IEC751

Type of fluid Air and neutral gases PC communication USB-Mini Din cable

**Environment** Air and neutral gases

Conditions of use From -10 to +50°C. In non-condensing condition. (°C/%RH/m) From 0 to 2000 m.

Storage From -10 to +70°C temperature

Protection class II. Pollution degree 2 Security Overvoltage category 2 (OVCII)

2014/30/EU EMC; 2014/35/EU Low Voltage; European 2011/65/EU RoHS II; 2012/19/EU WEEE directives

## Type of caps


Part numbers	EPP2	EPI125	EPI100	EPFI	EPFT	EPH202
	Cap: ABS <sup>(1)</sup>	Cap: 316 L stainless steel <sup>(2)</sup>	Cap: 316 L stainless steel <sup>(2)</sup>	Cap: 316 L stainless steel <sup>(2)</sup>	Cap: PTFE <sup>(3)</sup>	Cap: MnO <sub>2</sub> <sup>(4)</sup>
Features	Filter: meshed, 316 L st. steel	Filter: meshed, 316 L st. steel	Filter: meshed, 316 L st. steel	Filter: sintered, 316 L st. steel	Filter: sin- tered, PTFE	Filter: sintered, PTFE
	30 mm length	30 mm length	30 mm length	30 mm length	30 mm length	33 mm length
Max. particle	25μ	25μ	100μ	25μ	10μ	50μ
Max. air velociy	25 m/s	25 m/s	20 m/s	25 m/s	25 m/s	25 m/s
Max. temperature	80°C	180°C	180°C	180°C	180°C	180°C
Relative humidity	95% RH	95% RH	100% RH	90% RH	90% RH	95% RH
APPLICATIONS						
HVAC air-condi- tioning system	~	~				
Cold storage room			~		~	
Industry	~	~	~	~	~	
Pharma plants / Microelectronics	~	~	~	~	~	~
Dryer				~	~	
Curing				~		
Swimming-pool			~			

#### Features of the housing

Material	ABS V0 as per UL94
Protection	IP65
Display	75 x 40 mm, LCD 20 digits 2 lines. Height of digits: Values: 10 mm; Units: 5 mm
Cable gland	For cables Ø8 mm maximum
Weight	340 g

#### **Dimensions**

All dimensions are in millimeters.

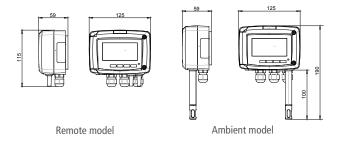

### **Technical features of probes**

#### • White polycarbonate probe

Measuring range	From -20 to +80°C
Dimensions of standard probe	Ø13 mm, 100 mm length
Dimensions of remote probe	Ø13 mm, 150 or 300 mm length (other length on request)
Cable	Silicone Ø4.8 mm, length 2 m (other length on request)



Polycarbonate probes are supplied with a flow-through ABS protection tip with a stainless steel filter 25  $\mu$ (ref: EPP2).

## • 316 L stainless steel probe

From -40 to +180°C Measuring range Ø13 mm, 150 or 300 mm length Dimensions of remote probe (other length on request) Silicone Ø4.8 mm, length 2 m Cable (other on request)



Stainless steel probes are supplied with a flow through stainless steel protection tip with a stainless steel filter 25 μ (ref: EPI25).

#### **External aggression**

Tips protect against the following external aggressions:

 Water droplets: EPFT • Shaving: EPI25 et EPFI

• Duct: EPFI

• Chemical product and grease: EPFT • H,O, (hydrogen peroxide): EPH2O2

<sup>(1)</sup> ABS: white acrylonitrile butadiene styrene (2) Stainless steel: 316 L (3) PTFE: white Polytetrafluoroethylene

<sup>(4)</sup> MnO2: manganese dioxide

#### **Connections**




- 1. DIP switch (d)
- 2. LCC-S software connections
- 3. Relays
- 4. Analogue outputs (a)
- 5. F3.20\* fuse
- Power supply terminal block (c) 6.
- 7. Cable glands


Power supply type (b) specified on the label on the side of the transmitter



TH210-HOX-R Power supply: 24 Vac/Vdc ±10 % 50-60 Hz 6 VA

Output: 0/4...20 mA / 0...5/10 V 100-240 Vac 24 Vac/Vdc

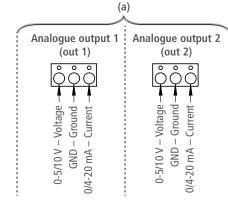

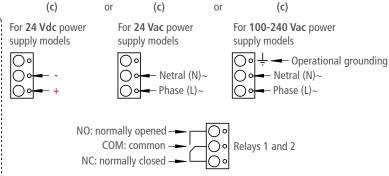

\*Fuse present only for 100-240 Vac models.


Every fuse replacement must be performed witht a power off device using a TR5 630 mA 250 V fuse.

#### Electrical connections as per NFC15-100 standard




This connection must be made by a formed and qualified technician. To make the connection, the transmitter must not be energized. Before making the connection, you must first check the power supply indicated on the transmitter board (see (b) in "Connections" part). The presence of a switch and a circuit breaker upstream the device is compulsory


For transmitters with 24 Vdc power supply:

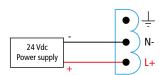


For transmitters with 24 Vac power supply:

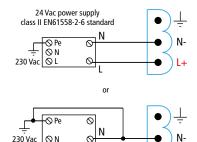


For transmitters with 100-240 Vac power supply:

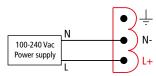



The selection of the output signal in voltage (0-10 V or 0-5 V) or in current (4-20 mA or 0-20 mA) is made via the DIP switch (d) of the electronic board of the transmitter: put the on-of switches as shown in the table below:

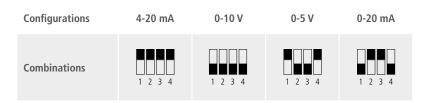

Connection of the output in current 4-20 mA:

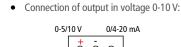

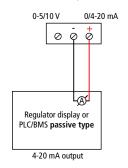

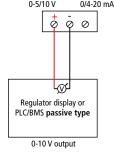



On 100-240 Vac models, if a fuse protection is used for the power line, it is imperative to use delayed-action fuses in order to absorb the surge of current when first turned on the transmitter.

#### **Configuration des capteurs**

It is possible on the class 210 to configure all the parameters of the transmitter: units, measuring ranges, outputs, channels, calculation functions, etc. via different methods:


- Keypad for models with display: a code-locking system allows to secure the installation (See class 210 transmitters user manual).
- Software (optional) on all models. Simple user-friendly configuration. See LCC-S user manual.

#### Configurable analogue output:

Range with center zero  $(-40/0/+40^{\circ}\text{C})$ , with offset zero  $(-30/0/+70^{\circ}\text{C})$  or standard range  $(0/+100^{\circ}\text{C})$ . It is possible to configure your own intermediary ranges

Caution: the minimum difference between the high range and the low range is 20.


Configure the range according to your needs: outputs are automatically adjusted to the new measuring range

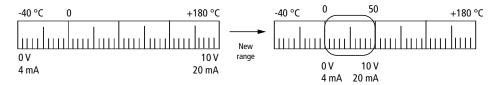

#### Mounting

To mount the transmitter, mount the ABS plate on the wall (drilling: Ø6 mm, screws and pins are supplied).

Insert the transmitter on the fixing plate (see A on the drawing beside). Rotate the housing in clockwise direction until you hear a "click" which confirms that the transmitter is correctly installed.

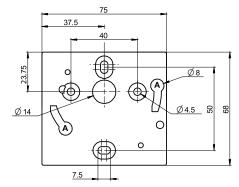

Les dimensions sont exprimées en millimètres.

#### Maintenance

Please avoid any aggressive solvent. Please protect the transmitter and its probes from any cleaning product containing formalin, that may be used for cleaning rooms or ducts.

#### **Calibration**

**Outputs diagnostic:** With this function, you can check with a multimeter (or on a regulator / display, or a PLC / BMS) if the transmitter outputs work properly. The transmitter generates a voltage of 0 V, 5 V and 10 V or a current of 4 mA, 12 mA and 20 mA

Certificate: Class 210 transmitters are supplied with adjusting certificates. Calibration certificates are available as an option.

#### **Precautions for use**

Please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.

#### **Options and accessories**

Nom	Référence
Configuration software with USB cable	LCC-S
Calibration certificate	-
Sliding fittings	-
Connection fittings	-
Cable glands	-
Protections tips	-
Wall-mounting support bracket for remote humidity probe	-



Only the accessories supplied with the device must be used.

