


On Manual – This is used to over-ride the Ex-Mo to adjust parameter settings.

Auto Mode – This is the normal operating mode for the Ex-Mo

Walk Test – This function is used to aid with the initial set up of the Ex-Mo. It will put the Ex-Mo into a mode where the Ex-Mo will turn off the switched load after 2 seconds of no detected movement

Time Settings – These are used to keep the switched load turned on for either 5m/30m/60m after the last movement detection.

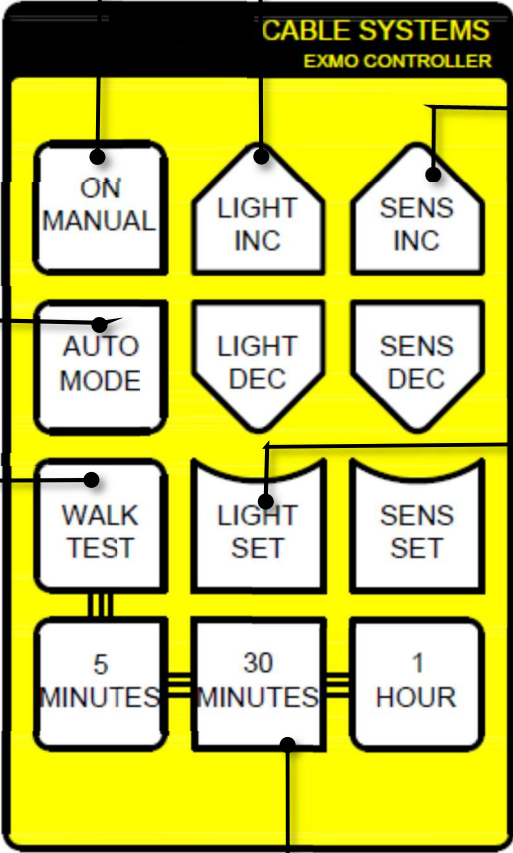

Light Increase/Decrease – These arrow buttons are used for setting the light level. There are 5 pre-set levels to choose from

Sensitivity Increase/Decrease – These arrow buttons are for adjusting the movement sensitivity level (range)

Light Set Now – This function will use the current light level as the Ex-Mos switching point