INSTRUCTION **Panasonic** MANUAL

Amplifier Built-in Leak Detection Sensor **EX-F60** Series

MJEC-EXF60 No.0054-72V

Thank you very much for purchasing Panasonic products. Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.



 This product is a sensor for detecting leak of fluids. When this product is used with safety devices. construct the system such that the device itself always operates in the safety side.

1 SPECIFICATIONS

	Туре	PFA mounting bracket type (For screw-fixing)		PVC mounting bracket type (For adhesive-fixing)		
		3m cable length type	5m cable length type	3m cable length type	5m cable length type	
Model NPN out	tput type	EX-F61	EX-F61-C5	EX-F62	EX-F62-C5	
Item \ No. PNP out	tput type	EX-F61-PN	EX-F61-PN-C5	EX-F62-PN	EX-F62-PN-C5	
Sensing object		Agent, such as Sulfuric acid, Hydrochloric acid, Phosphoric acid or Ammonia etc. (Note1, 2)				
Supply voltage		12 to 24V DC ± 10% Ripple P-P 10% or less				
Current consumption		15mA or less				
Output		<npn output="" type=""> <pnp output="" type=""></pnp></npn>				
		NPN open-collector transister PNP open-collector transister				
		Maximum sink current: 50mA Maximum source current: 50mA				
		- Applied voltage: 30V DC or less (between output and 0V) - Applied voltage: 30V DC or less (between output and +V)				
		• Residual voltage: 1.0V or less (at 50mA sink current) • Residual voltage: 1.0V or less (at 50mA source current)				
		0.4V or less (at 16mA sink current) 0.4V or less (at 16mA source current)				
Output operation		ON when normal operation, OFF when leak is detected or the sensor is mounted improperly.				
Short-circuit protection		Incorporated				
Response time		50ms or less				
Abnormality indicator		Red LED (lights up when leak is detected or the sensor is mounted improperly.)				
Normal indicator		Green LED (lights up when the sensor is mounted properly.)				
Protection		IP67(IEC)				
Ambient temperature		-10 to +60°C (No dew condensation or icing allowed) (Note 3, 4), Storage: -20 to +70°C				
Ambient humidity		35 to 85% RH, Storage: 5 to 85% RH				
Ambient illuminance		Incandescent light: 1,000 lx or less at the light-receiving face				
Emitting element		Infrared LED (non-modulated)				
Material		Enclosure: PFA				
Coble		0.1mm ² 3-core PFA	0.1mm ² 3-core PFA	0.1mm ² 3-core PFA	0.1mm ² 3-core PFA	
Cable		cabtyre cable, 3m long	cabtyre cable, 5m long	cabtyre cable, 3m long	cabtyre cable, 5m long	
Weight		60g approx.	80g approx.	60g approx.	80g approx.	
Accessories		PFA mounting bracket: 1 pc. PVC mounting bracket: 1pc.		bracket: 1pc.		

- Notes: 1) Highly viscous liquid may not be stably detected.
 - 2) The agents mentioned above are examples. Further, PVC mounting bracket may not be used depending on type or viscosity etc. of the agent. For details, please contact us.
 - 3) Liquid being detected should be also kept within the rated ambient temperature range.
 - 4) The specified ambient temperature is only for fixed product.

2 CAUTIONS


- This product has been developed / produced for industrial use only.
- This product is suitable for indoor use only.
- Avoid using the product in an explosive atmosphere because this product does not have an explosive-proof protective construction.
- Make sure to carry out the wiring in the power supply off condition.
- Take care that wrong wiring will damage the sensor.
- Verify that the supply voltage variation is within the rating.
- Take care that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the sensor may get burnt or damaged.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- Do not use during the initial transient time (50m sec. approx.) after the power supply is switched on.
- In case noise generating equipment (switching regulator, inverter) motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Cable extension is possible up to total 50m with 0.3mm², or more, cable. However, in order to reduce noise, make the wiring as short as possible.
- The extension of a power supply line and the output line ofless than 10m is acceptable in case using this product as conforming to S-mark.
- Do not run the wires together with high-voltage lines or power lines or put them in the same race way. This can cause malfunction due to induction. In case a surge is generated in the used power supply, connect a surge absoeber to the supply.

- Be sure to use the exclusive mounting bracket when installing the sensor to avoid human error, etc. Reliable detection cannot be guaranteed when this mounting bracket is not used.
- Make sure to use an isolation transformer for the DC power supply. If an auto-transformer (single winding transformer) is used, this product or the power supply may get damaged.
- In case air bubbles are drawn into the sensing part, take care that it may take some time for sensing to stabilize, or sensing may even become unstable.
- When liquid remains on the sensing surface after leak detection, wipe all liquid from the sensing surface. To avoid scratching the sensing surface and the enclosed mounting bracket, use a soft cloth.
- If there is liquid remained or scratch on the sensing surface or the exclsive mounting bracket, normal operation cannot be performed.
- Since this sensor employs non-modulated infrared LED, take sufficient care against extraneous light. Do not expose the sensing part directly to the extraneous light.
- Avoid dust, dirt, and steam. Further, do not use this product where oil or grease splashes to the product, or in an environment containing corrosive gas, etc.
- In case this sensor is used where electrostatic charge is present, use a metal leak pan, which should be connected to an actual ground.
- In case of using this product 50°C or more, be sure to fix this product with a dedicated mounting bracket.

3 MOUNTING

EX-F61□

Insert the M4 stud-bolt (length 10mm or more) welded on the user's facilities into the mounting hole of the PFA mounting bracket and screw with an M4 nut (please arrange separately). The tightening torque should be 0.98N·m or less

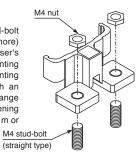



EX-F62□

- Please note that if the excess adhesive from the bottom surface of the exclusive mounting bracket is remained, the sensing capability may be affected.
- Use adhesive for polyvinyl chloride(PVC).

How to fit the sensor body to the exclusive mounting bracket

 Align the projections in the sensor body with the notches of the exclusive mounting bracket and slide till a click is felt.

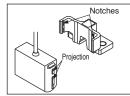


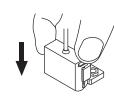

How to remove the sensor body from the exclusive mounting bracket

Pinch the projections of the sensor body and pull the body


Never pull the cable, since it may cause a cable break.

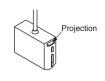



4 I/O CIRCUIT DIAGRAMS


NPN output type

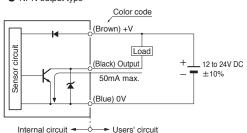


PNP output type (Brown) +V 50mA max _ 12 to 24V DC - ₹ ±10% (Black) Output (Blue) 0V Internal circuit ← Ó ► Users' circuit

5 DIMENSIONS (Unit: mm)

■ EX-F61□ (Sensor with PFA mounting bracket)

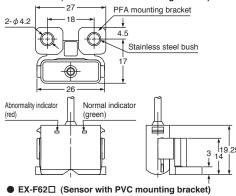

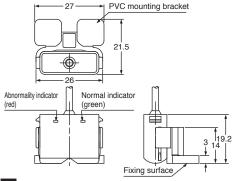

6 INTENDED PRODUCTS FOR CE MARKING

● The models listed under ' SPECIFICATIONS' come with CE Marking.

As for all other models, please contact our office Contact for CE

Panasonic Marketing Europe GmbH Panasonic Testing Center Winsbergring 15, 22525 Hamburg, Germany

Panasonic Industrial Devices SUNX Co., Ltd.

http://panasonic.net/id/pidsx/global

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Phone: +81-568-33-7861 FAX: +81-568-33-8591

For sales network, please visit our website

© Panasonic Industrial Devices SUNX Co., Ltd. 2016 PRINTED IN JAPAN

