XUM9A•XB• www.tesensors.com

Photo-electric sensors - Miniature design





NPN - M8 Connector : XUM9ANXBM8 PNP - M8 Connector: XUM9APXBM8

NPN - 2 m Cable : XUM9ANXBL2 PNP - 2 m Cable: XUM9APXBL2

Polarised reflex



Package Content (Example)





Scan the Qr-code to access this Instruction Sheet in different languages or you can download it from our website

at: www.tesensors.com

We welcome your comments about this document. You can reach us through the customer support page on your local website.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power before servicing equipment.
- Do not connect this device to AC power.
- The power voltage must not exceed the rated range.

Failure to follow these instructions will result in death or serious injury.

IMPROPER SETUP OR INSTALLATION


- This equipment must only be installed and serviced by qualified personnel.
- Read, understand, and follow the compliance below, before installing the XUM Photo-electric sensor.


WARNING

- Do not tamper with or make alterations on the unit.
- Comply with the wiring and mounting instructions.
- Check the connections and fastening during maintenance operations.
- The proper functioning of the XUM photoelectric sensor and its operating line must be checked regularly and according to the application (for example number of operations, level of environmental pollution, etc.).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Mounting and tightening torques

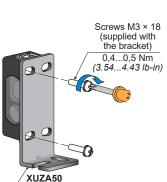

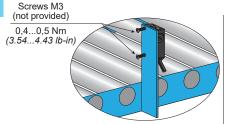

▲ CAUTION


UNINTENDED EQUIPMENT OPERATION

Do not apply excessive impact on the sensor during the installation process, so as to prevent damage or deterioration in the degree of protection Failure to follow these instructions can result

in injury or equipment damage.




LEDs and settings

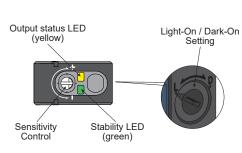


Wiring diagrams

M8 Connector - 4 pins










2 m Cable - 3 wires







Wiring precaution

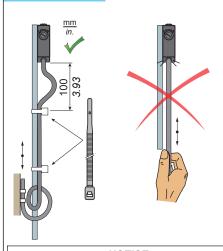

NOTICE

UNINTENDED EQUIPMENT OPERATION

Do not pull on the sensor cable so as to prevent damage or deterioration in the degree of protection

Failure to follow these instructions can result in equipment


Electrical equipment should be installed, operated and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

© 2021 Schneider Electric. "All Rights Reserved."


NNZ98172 00

09 - 2021

www.tesensors.com

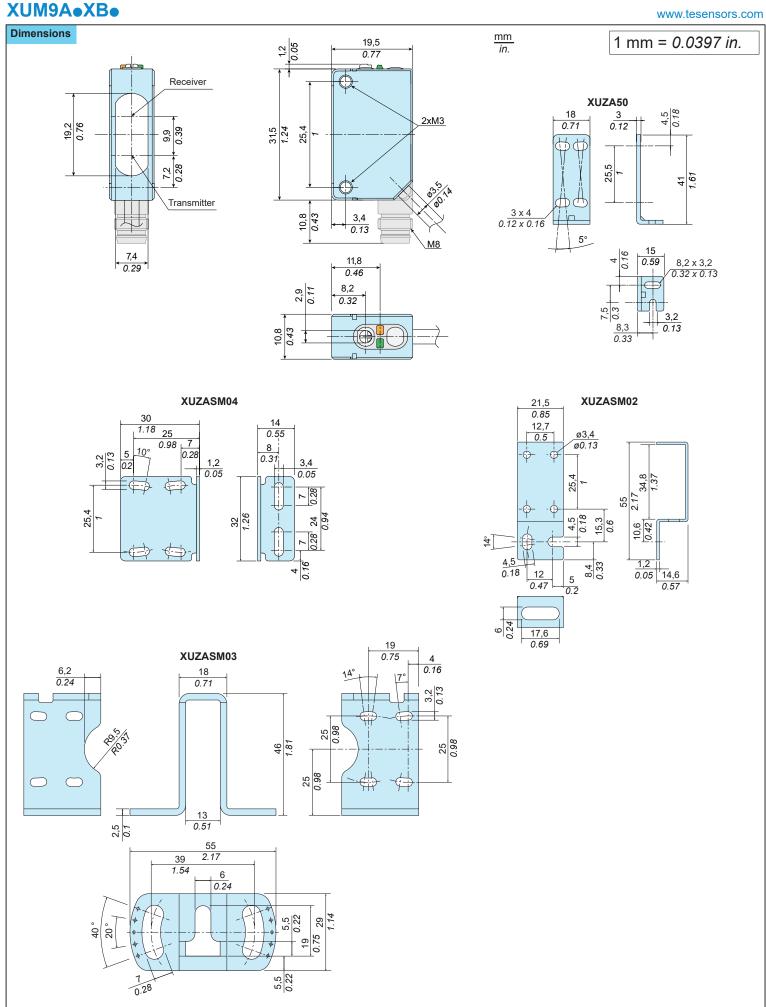


XUM9A•XB• www.tesensors.com

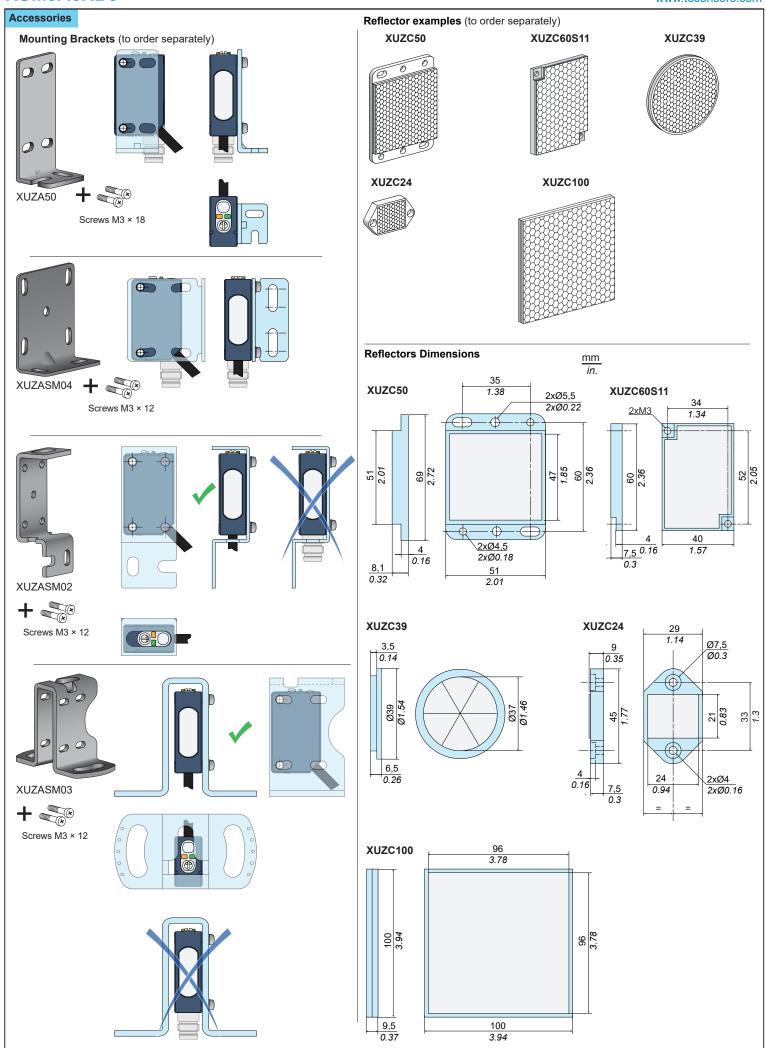




Pre-Wired connectors (examples) PVC cable for general use PUR cable for severe industrial environments M8, 4 pins M8 - M12, 4 pins Cable length PUR Jumper length PUR XZCR1509041J1 XZ CR1510041J1 2 m / 6.56 ft. XZCPV0941L2 XZCP0941L2 XZCPV1041L2 XZCP1041L2 1 m / 3.28 ft. 5 m / 16.4 ft. XZCPV0941L5 XZCP0941L5 XZCPV1041L5 XZCP1041L5 2 m / 6.56 ft. XZCR1509041J2 XZCR1510041J2 10 m / 32.8 ft. XZCPV0941L10 XZCP0941L10 XZCPV1041L10 | XZCP1041L10

Sensor position adjustment

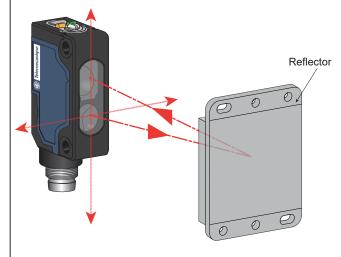


- Translate the sensor or reflector, up/down and left/right. When the setting is optimal, the stability indicator (green) is lit.
- Check sensor operation with the object and adjust the sensor, if necessary.




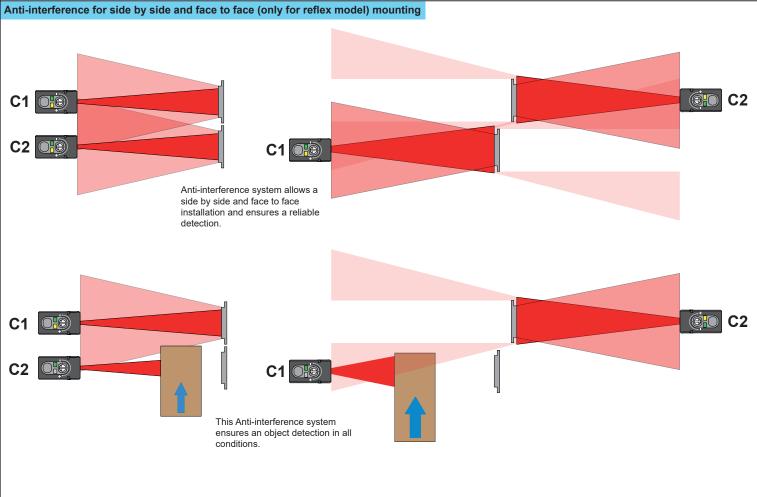




Output mode setting: Light-On or Dark-On (Light-On by default)

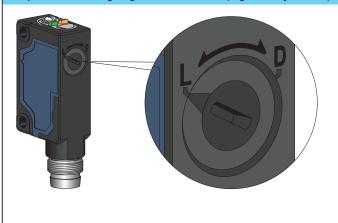

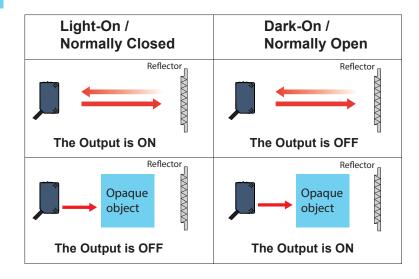

Sensor sensitivity adjustment

For accurate detection, follow the configuration below. (eg. Reflective objects, with holes or small size to obstruct the reflection of the light beam).

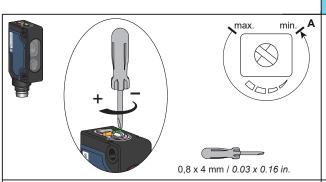

Dark-On Light-On


1-Connect the sensor to the power supply (see page 1 for the wire connection & page 7 for the power voltage).

Before settings, start with the potentiometer at the minimum position (resulting to point A).

1-Connect the sensor to the power supply (see page 1 for the wire connection & page 7 for the power voltage).

Before settings, start with the potentiometer at the minimum position (resulting to point A).



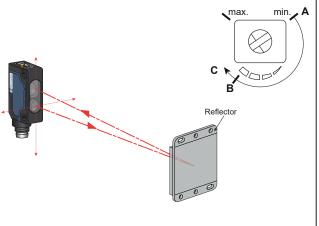

2-Put the reflector in front of the sensor. Turn the potentiometer clockwise until the output led (yellow) switches on: the reflector is detected (resulting to point B).



Continue to turn the potentiometer clockwise until the stability led (green) switches on (resulting to point C).




2-Put the reflector in front of the sensor. Turn the potentiometer clockwise until the output led (yellow) switches off: the reflector is detected (resulting to point B).



Continue to turn the potentiometer clockwise until the stability led (green) switches on (resulting to point C).



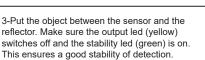

The Sensor is set and ready to detect.





3-Put the object between the sensor and the reflector. Make sure the output led (yellow) switches on & the stability led (green) is on. This ensures a good stability of detection.

The Sensor is set and ready to detect.





During the set up process, the output is acting as the yellow led


NNZ98172 00

056 222 38 18 mailbox@sentronic.com



Detection curves











Lateral Displacement - Polarized Retro-reflective XUM9

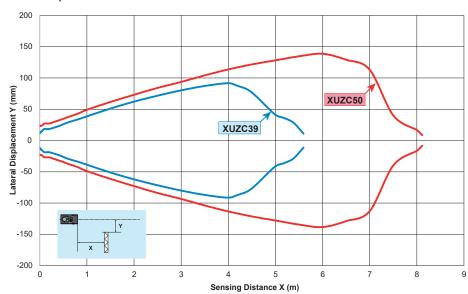

Excess Gain - Polarized Retro-reflective XUM9

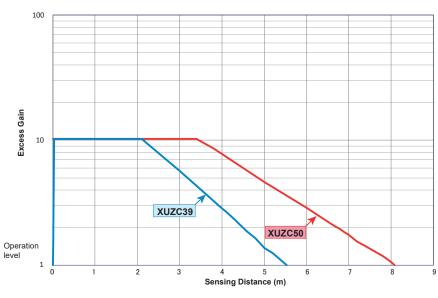







Characteristics	1 mm = 0.0397 in.
Certification	CE - UKCA - cULus
Sensing Range (using a 50 mm x 50 mm reflector XUZC50) Excess gain = 1: Maximum sensing ditance	8 m - excess gain = 1 6,7 m - excess gain = 2
Color of dectection light beam	Red
Blind zone	50 mm using a 50 mm x 50 mm reflector XUZC50 (for the reflector - no blind zone for objects)
Sensing distance setting	Potentiometer 1 turn (~ 240 degrees)
Light-On/Dark-On selection	Switch (~ 120 degrees)
Output type	One open collector output, PNP or NPN
ON Voltage drop	2 V max. (30 Vdc 100 mA) / 1,2 V max. (30 Vdc 10mA)
Current consumption	< 20 mA max.
Switching capacity	100 mA
Response time	0,5 ms max.
Recovery time	0,5 ms max.
Switching frequency	1000 Hz
Electrostatic discharge immunity	4 kV (Contact), 8 kV (Air) conforming to IEC 61000-4-2
Electromagnetic field immunity	10 V/m conforming to IEC 61000-4-3
Fast transients immunity	Burst 5 kHz - 2 kV conforming to IEC 61000-4-4
Conducted disturbances immunity	10 V conforming to IEC 61000-4-6
Emissivity Radiated disturbances	Class A conforming to EN 55011 / CISPR 11
Power Voltage	Rated operational voltage: 1224 Vdc Ripple p-p 10% maximum Operating range: 1030 Vdc (including ripple)
Product protection	Power supply : Reverse polarity protection Output: Short circuit protection Reverse polarity protection
Light Immunity	Operating atmosphere; Sunlight 40 kLx max. Incandescent light 10 kLx max. (at the receiver surface)
Ambient Temperature	Operating: - 30+55 °C (-22+131 °F), Storage: - 40+70 °C (-40+158 °F)
Ambient Humidity	Operating : 3595% RH, Storage : 3595% RH
Degree of protection	IP65, IP67 conforming to EN/IEC 60529
Vibration resistance	Frequency range: 10 Hz to 500 Hz Acceleration: 9 gn
Shock resistance	Peak acceleration: 100 g _n Duration of the pulse: 11 ms
Material	Housing: PBT, Lens: PMMA, Operation cover: PC, Adjustment potentiometer: PBT

((





