# Compact Size Picking Sensor

# **SERIES**

FIBER SENSORS

Related Information

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

## AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS** 

PARTICUI AR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

**ENDOSCOPE** 

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Slim Body

Other Products

NA1-PK5/ NA1-5 NA1-PK3

■ General terms and conditions...... F-17


■ Glossary of terms......P.1359~

■ Sensor selection guide ...... P.475~ ■ General precautions......P.1405







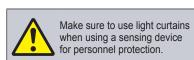



## Boasts a compact, pocket lighter size enabling universal installation

## Space-saving, pocket lighter-sized unit

Ultra compact size: W24 × H70 × D8 mm W0.945 ×  $H2.756 \times D0.315$  in.

Can even be mounted within the small space constraints of parts containers.



NA1-PK3

Pocket lighter

## Utilizes a large, bright, clearly visible job indicator

24 mm

The ultra compact body incorporates a job indicator approx. 50 mm 1.969 in tall. Due to its brightness and high visibility, it is now possible to check sensor operation even from a distance.





## **APPLICATIONS**

#### Cell production line





## BASIC PERFORMANCE

## No synchronization wires required

Synchronization wires are not required, due to the utilization of a synchronized scanning system that results in a reduction of wiring man-hours. In addition, the sensors can be switched among three different emission frequencies, allowing up to three sets of sensors to be installed closely together in the same vertical plane, without causing mutual interference. Even when installed in multistage shelving, malfunctions due to mutual interference will not occur. (When mounted horizontally, a maximum of two sensor sets may be used side-byside, without interference.)



## **FUNCTIONS**

## Switchable output operation

Output operation can be switched to suit the desired application.

## **OPTIONS**

## Sensor protection brackets are available

Sensor protection brackets are now available (optional), to protect sensors from damage due to tools and other objects. The protection brackets have a black coating, which enhances the visual effectiveness of the job indicator.



## **MOUNTING**

## Easy alignment

The sensor's beam axis is directly in line with the mounting holes, making sensor alignment easier. Mounting can be performed simply by using M4 nuts.



## Flexible cable orientation

The cabling can be oriented in either of the two different directions: downward or sideways, thus permitting a flexible layout, in accordance with the sensor's mounting position.



## **ORDER GUIDE**

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

LIGHT

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES ENERGY


VISUALIZATION COMPONENTS

COMPONENTS MACHINE VISION SYSTEMS

CURING SYSTEMS

Туре	Appearance	Sensing range (Note 1)	Model No. (Note 2)	Output
NPN output	Sensing height 1-49.2 mm	30 to 300 mm 1.181 to 11.811 in	NA1-PK3	NPN open-collector transistor
PNP output	1.937 in Beam pitch 3 beam 24.6 mm 0.969 in		NA1-PK3-PN	PNP open-collector transistor

Notes: 1) The sensing range is the possible setting distance between the emitter and the receiver.

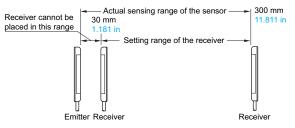

2) The model No. with "P" shown on the label affixed to the product is the emitter, "D" shown on the label is the receiver. (e.g.) Emitter of NA1-PK3: NA1-PK3P, Receiver of NA1-PK3: NA1-PK3D

## 5 m 16.404 ft cable length type, pigtailed type

5 m 16.404 ft cable length type (standard: 2 m 6.562 ft) and pigtailed type (standard: cable type) are also available.


#### • Table of Model Nos.

Туре	Standard type	5 m 16.404 ft cable length type	Pigtailed type (Note)
NPN output	NA1-PK3	NA1-PK3-C5	NA1-PK3-J
PNP output	NA1-PK3-PN	NA1-PK3-PN-C5	NA1-PK3-PN-J

Note: Please order the suitable mating cable separately for pigtailed type.

## • Mating cable (2 cables are required.)


Model No.	Description
CN-24-C2	4-core, cable length 2 m 6.562 ft
CN-24-C5 4-core, cable length 5 m 16.404 ft	

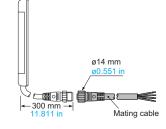

## **OPTIONS**


Designation	Model No.	Description
Sensor protection MS-NA3-3		It protects the sensor body. Two black bracket set  Four M4 (length 15 mm 0.591 in) screws with washers, and four nuts are attached.
Y-shaped connector SL-WY This connector is emitter into one.		This connector is able to combine the cables of receiver and emitter into one.

## Sensor protection bracket



## Y-shaped connector

• SL-WY

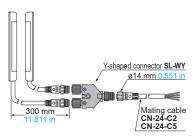

# Selection Guide Slim Other Products

NA1-PK5/ NA1-5


NA1-PK3

## **SPECIFICATIONS**

	Туре	NPN output	PNP output			
Item	n Model No.	NA1-PK3	NA1-PK3-PN			
Sensing height		49.2 mm 1.937 in				
Sensing range (Note 2)		30 to 300 mm 1.181 to 11.811 in				
Beam pitch		24.6 mm 0.969 in				
Number of beam channels		3 beam channels				
Sensing object		ø29 mm ø1.142 in or more opaque object (completely beam interrupted object)				
Supp	ply voltage	12 to 24 V DC ±10 % Ripple P-P 10 % or less				
Curr	ent consumption	Emitter: 30 mA or less, Receiver: 50 mA or less				
Output		NPN open-collector transistor  • Maximum sink current: 100 mA  • Applied voltage: 30 V DC or less (between output and 0 V)  • Residual voltage: 1 V or less (at 100 mA sink current)  0.4 V or less (at 16 mA sink current)	PNP open-collector transistor  • Maximum source current: 100 mA  • Applied voltage: 30 V DC or less (between output and +V)  • Residual voltage: 1 V or less (at 100 mA source current)  0.4 V or less (at 16 mA source current)			
	Utilization category	DC-12 o	or DC-13			
	Output operation	ON or OFF when one or more beam channels are	e interrupted, selectable by operation mode switch			
	Short-circuit protection	Incorporated				
Res	ponse time	10 ms or less (when interference prev	rention function is used: 30 ms or less)			
<u>ي</u>	Emitter	Power indicator: Green LED (lights up when the power is ON) Job indicator: Orange LED (lights up when the job indicator input is Low)	Power indicator: Green LED (lights up when the power is ON) Job indicator: Orange LED (lights up when the job indicator input is High)			
Indicators	Receiver	Operation indicator: Red LED (lights up when the output is ON) Stable incident beam indicator: Green LED (lights up when all beam channels are stably received) Job indicator: Orange LED (lights up when the job indicator input is Low)	Operation indicator: Red LED (lights up when the output is ON) Stable incident beam indicator: Green LED (lights up when all beam channels are stably received) Job indicator: Orange LED (lights up when the job indicator input is High)			
Interference prevention function		Incorporated (Up to 3 units can be	mounted close together.) (Note 3)			
	Pollution degree	3 (Industrial environment)				
	Protection	IP62 (IEC)				
ЭСС	Ambient temperature	-10 to +55 °C +14 to +131 °F (No dew condensation of	or icing allowed), Storage: –20 to +70 °C –4 to +158 °F			
nvironmental resistance	Ambient humidity	35 to 85 % RH, Stor	rage: 35 to 85 % RH			
al res	Ambient illuminance	Incandescent light: 3,000 ℓx at the light-receiving face				
nent	EMC	EN 60947-5-2				
iron	Voltage withstandability	1,000 V AC for one min. between all supply terminals connected together and enclosure				
Env	Insulation resistance	20 $M\Omega$ , or more, with 250 V DC megger between all supply terminals connected together and enclosure				
	Vibration resistance	10 to 150 Hz frequency, 0.75 mm 0.030 in (5 G max.) amplitude in X, Y and Z directions for two hours each				
	Shock resistance	500 m/s² acceleration (50 G approx.) in X, Y and Z directions for three times each				
Emit	ting element	Infrared LED (synchronized scanning system)				
Material		Enclosure: Heat-resistant ABS, Lens cover: Acrylic, Indicator cover: Acrylic				
Cabl	le	0.2 mm <sup>2</sup> 4-core (emitter: 3-core) oil resistant cabtyre cable, 2 m 6.562 ft long				
Cabl	le extension	Extension up to total 100 m 328.084 ft is possible for both emitter and receiver with 0.3 mm², or more, cable.				
Net	weight	Emitter: 50 g approx., Receiver: 50 g approx.				

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C +73.4 °F.

2) The sensing range is the possible setting distance between the emitter and the receiver.



3) For more details, refer to the "Interference prevention function" in "PRECAUTIONS FOR PROPER USE".

## ■ I/O CIRCUIT AND WIRING DIAGRAMS

## NPN output type

LASER

PHOTO-ELECTRIC SENSORS

LIGHT

PRESSURE /

PARTICULAR

SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

STATIC

CONTROL

ENDOSCOPE

LASER MARKERS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION

VISUALIZATION COMPONENTS

COMPONENTS

MACHINE

VISION SYSTEMS CURING SYSTEMS

Selection Guide

NA1-5

NA1-PK3

SENSORS


#### I/O circuit diagram Color code / Connector pin No.

of the pigtailed type (Brown / 1) +V (Black / 4) Load Sensor circuit Output (Note 1) 12 to 24 V DC ±10 % 100 mA max. (Blue / 3) 0 V (Pink / 2) Job indicator input lighting circuit (Note 2)(Note 3) ÷Ε

Symbols...D : Reserve supply polarity protection diode ZD: Surge absorption zener diode


Tr : NPN output transistor E: Job indicator (IND.)

Non-contact voltage or NPN opencollector transistor



Job indicator input Low (0 to 2 V): Lights up High (5 to 30 V, or open): Lights off

Connector pin position (Pigtailed type)



Notes: 1) No connection is required for the emitter.

2) The pin position for the SL-WY Y-shaped connector (optional) is identical to the receiver.


#### Internal circuit -→ Users' circuit

Notes: 1) The emitter does not incorporate the output (black).

- 2) If a mating cable is connected to the pigtailed type, then the lead wire color is "white".
  - 3) When the job indicator is used as a large size operation indicator, connect the job indicator input wire (pink) of the emitter and the receiver to the output wire (black) of the receiver.

## PNP output type


### I/O circuit diagram

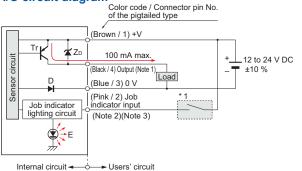

Symbols...D: Reserve supply polarity protection diode ZD: Surge absorption zener diode
Tr : PNP output transistor E: Job indicator (IND.)

Non-contact voltage or PNP opencollector transistor Job indicator input High (4 to 30 V): Lights up Low (0 to 0.6 V, or open): Lights off

Connector pin position (Pigtailed type)



Notes: 1) No connection is required for the emitter.

2) The pin position for the SL-WY Y-shaped connector (optional) is identical to the receiver.

Notes: 1) The emitter does not incorporate the output (black).


- 2) If a mating cable is connected to the pigtailed type, then the lead wire color is "white".
- 3) When the job indicator is used as a large size operation indicator, connect the job indicator input wire (pink) of the emitter and the receiver to the output wire (black) of the receiver.

## **SENSING CHARACTERISTICS (TYPICAL)**

## Parallel deviation


# **Vertical direction**



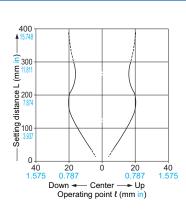



# **Horizontal direction**




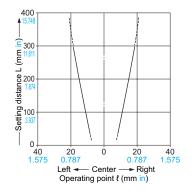


## **Angular deviation**







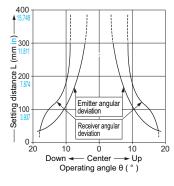


### Horizontal direction emitter angular deviation



## Horizontal direction receiver angular deviation



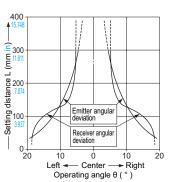

## PRECAUTIONS FOR PROPER USE

Refer to General precautions.

## · Never use this product as a sensing device for personnel protection.

· For sensing devices to be used as safety devices for press machines or for personnel protection, use products which meet standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.




- If this product is used as a sensing device for personnel protection, death or serious body injury could result.
- For a product which meets safety standards. use the following products.

Type 4: **SF4B** series


Type 2: SF2B series

### Part description

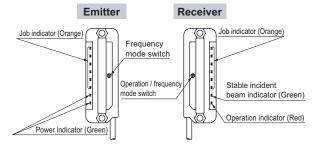

### Mounting

• Use M4 screws with washers and M4 nuts. The tightening torque should be 0.5 N·m or less. (Purchase the screws and nuts separately.)

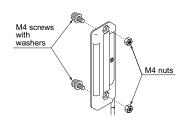

#### Selection of operation

• The output operation can be selected by the operation / frequency selection switch on the receiver.

Make sure that the power supply is off while setting the selection switch.


•		State of operation / frequency selection switch	Output operation
	L-ON	FREQ. 2 2 FREQ. 1 L-ON	OFF when one or more beams are interrupted.
	D-ON	FREQ. 2 2 FREQ. D-ON 1 1 L-ON	ON when one or more beams are interrupted.

Notes: 1) Selection of the output operation and the frequency for the receiver is carried out with the same switch. When the output operation is set, be sure to select the same frequency No. of the emitter and the

2) In case the operation / frequency selection switch is set to the position other than 1, 2 or 3, the state of the receiver is in D-ON / frequency 1.


#### Orientation

• The emitter and the receiver must face each other correctly. If they are set upside down, the sensor does not work.




## Interference prevention function

• By setting different emission frequencies, three units of NA1-PK3 can be mounted close together, as shown in the figure on the below.

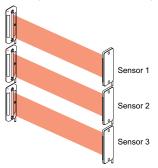

· However, if the sensors are mounted close together as shown in the figure below, up to 2 sets of sensors are possible.



## Frequency setting

· Set the both emitting and receiving frequency of Sensor 1 to FREQ. 1, the both emitting and receiving frequency of Sensor 2 to FREQ. 2 and the both emitting and receiving frequency of Sensor 3 to FREQ. 3. Make sure that the power supply is off while setting the selection switch.

		Emitter	Receiver
		Frequency selection switch	Operation / Frequency selection switch
Sensor 1	NO-7	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
Selisori	NO-Q	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
Sensor 2	NO-7	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
3611501 2	D-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
Sensor 3	L-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
Sensor 3	D-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON

- Notes: 1) Take care that selection of the output operation and the frequency for the receiver is carried out with the same switch.
  - 2) In case the frequency switch and the operation / frequency selection switch is set to the position other than 1, 2 or 3, the state of the emitter is in frequency 1 and that of the receiver is in D-ON / frequency 1.



## PRECAUTIONS FOR PROPER USE

Refer to General precautions

## Wiring

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

LIGHT

PRESSURE / SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR

SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

STATIC CONTROL

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY

COMPONENTS

MACHINE

VISION SYSTEMS

Selection Guide

NA1-PK3

MICRO

- · Make sure that the power supply is off while wiring and setting the selection switch.
- Take care that wrong wiring may damage the sensor.
- Verify that the supply voltage variation is within the rating.
- · If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator. inverter motor, etc.) is used in the vicinity of the sensor, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Extension up to total 100 m 328.084 ft is possible with 0.3 mm<sup>2</sup>, or more, cable for both emitter and receiver. However, in order to reduce noise, make the wiring as short as possible.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.

- · Make sure to use an isolation transformer for the DC power supply. If an auto-transformer (single winding transformer) is used, this product or the power supply may get damaged.
- In case a surge is generated in the used power supply, connect a surge absorber to the supply and absorb the surge.

#### **Others**

- Do not use during the initial transient time (0.5 sec.) after the power supply is switched on.
- · Take care that the sensor is not directly exposed to fluorescent light from a rapid-starter lamp or a high frequency lighting device, as it may affect the sensing performance.
- · Avoid dust, dirt, and steam.
- Take care that the product does not come in direct contact with water, oil, grease or organic solvents, such as, thinner, etc.
- To select the switch, a minus screwdriver is necessary. (Tip dimension:  $2.5 \times 0.6 \text{ mm } 0.098 \times 0.024 \text{ in}$ )
- These sensors are only for indoor use.

The CAD data in the dimensions can be downloaded from our website.

## **DIMENSIONS (Unit: mm in)**

NA1-PK3 NA1-PK3-PN **Emitter** Receiver 2-ø4.5 ø0.177 mounting through holes, M4 nut seats 0.315 3.5 0.138 2-ø4.5 ø0.177 mounting through holes, M4 nut seats, 3.3 0.130 deep Job indicator (Orange) 10.4 Job indicator Frequency 24.6 24.6 70 2.75 63 70 63 Operation / frequency 24.6 24.6 node switch Stable incident beam Power indicator indicator (Green) (Green) Operation indicator (Red) ø3.7 ø0.146 cable, 2 m 6.562 ft long ø3.7 ø0.146 cable, 2 m 6.562 ft long

t 0.8

0.236

### **MS-NA3-3**

Sensor protection bracket (Optional)


\_18 \_

-18 -

3.5

63

6.8 0.268

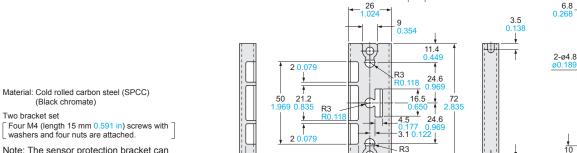

6.2 0.244

Note: The sensor protection bracket can be used for both the emitter and the receiver.